

TYRE VULCANIZING MACHINE EE-TV088

USER MANUAL



KEEP THE MANUAL NEAR
THE MACHINE ALL TIME
AND MAKE SURE ALL
USERS HAVE READ THIS.

FOLLOW THE INSTRUCTIONS
CAREFULLY TO GRANT THE
MACHINE A CORRECT
FUNCTION AND LONG SERVICE
LIFE.

EVER-ETERNAL Garage Equipment Co.,ltd.

The manufacturer keeps the rights to improve the
contents in this manual.

Tel:+86-21-32500750
Fax:+86-21-32500785
[Http://www.everet.net](http://www.everet.net)
sales@ever- eternal.com

Features

1. Many kinds of super heating modules, suitable for tire

sizes from moderate size to 1200mm.

2. You can get the operating bracket moving

higher/lower, or right-and-left revolving at will.

3. It's very convenient and less force is needed when

you fit your tire because of its flexible upper revolving

arm.

Operating procedure

1. First of all, turn on the power, press the up/down

switch according to your need. it can be heated

individually.

2. you don't need to move them when you repair heavier

tires. You just need to get the operating bracket

moved higher/lower, revolved right-and left to

complete the repair of the tires.

Technical parameters

1. Power supply voltage: 220/50hz

2. Max current: **5A**

3. Rating power: **400w x 2**

3. Insulating Resisance: $\geq 5 M\Omega$

Caution

The power supply voltage must be kept steadily when

the machine is running. Otherwise a voltage stabilizer

Shall be installed



